

## Zeus

Modello/Model	Watt	Alimentazione/Input
ZEUS1210	10W	110/230V
ZEUS1220	20W	110/230V
ZEUS1240	40W	110/230V
ZEUS1260	60W	110/230V

### IT

#### ISTRUZIONI DI SICUREZZA

- L'apparecchio deve essere installato, connesso e testato da un elettricista qualificato e in accordo con le norme vigenti.
- Disconnettere l'alimentatore prima dell'installazione o della manutenzione dell'apparecchio e assicurarsi che i cavi non vengano danneggiati.
- Pulire l'apparecchio con un panno leggero e un detergente a pH neutro.
- Laddove si abusasse dell'apparecchio o si apportassero modifiche, la garanzia sarebbe da considerarsi nulla.
- Il fornitore è libero di apportare modifiche al design, specificazioni ed istruzioni di montaggio.


### EN

#### SAFETY INSTRUCTIONS

- The device should be installed, connected and tested by a qualified electrician, and in accordance with local regulations.
- Turn off the power supply before installation or maintenance of the device, and make sure that the cables will not be squeezed or damaged by sharp edges.
- Clean the device with a soft cloth and a standard pH neutral detergent. Stainless steel surfaces should be maintained regularly.
- Misuse or changes to the device cause loss of warranty.
- The manufacturer is free to change the design, specifications and instructions for assembly.

## ISTRUZIONI PER L'INSTALLAZIONE/INSTALLATION INSTRUCTIONS

### 1 CUTTING SIZE:

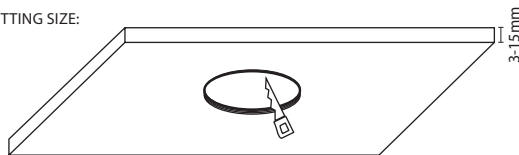


- ZEUS1210 - Ø95mm
- ZEUS1220 - Ø155mm
- ZEUS1240 - Ø210mm
- ZEUS1260 - Ø210mm

**IT** Realizzare il foro nel soffitto.

**EN** Make, in the ceiling, the hole for the light fitting.



### 2

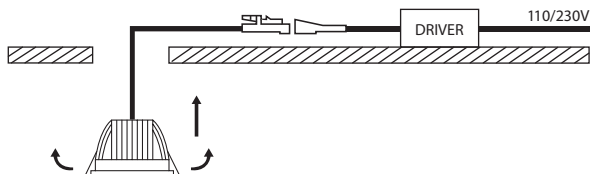

**IT** Gli apparecchi, per sicurezza nei confronti del grado di protezione, sono sigillati e forniti di cavo di alimentazione dotato di connettore. Realizzare la connessione elettrica semplicemente collegando il connettore al proprio alimentatore in dotazione senza aprire nè manomettere l'apparecchio, poi fissate l'apparecchio nel soffitto.

**EN** The devices, in order to grant the IP rate, are delivered sealed and equipped with power supply cable with connectors. Connect the device to the plant simply linking the connector to the equipped driver, without opening or tamper with the device. Then install the device in the ceiling.



### 3

  



**IT** Verificare la corretta esecuzione dei collegamenti al circuito di alimentazione, procedere con l'accensione.

**EN** After verifying the correct circuit, wiring to the power supply, switch on the electricity for the light fitting.



ZEUS1210

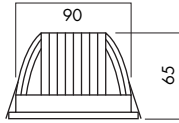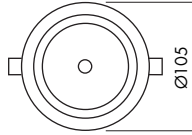

ZEUS1220

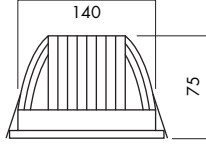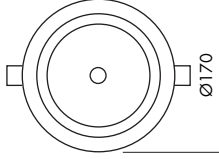

ZEUS1240

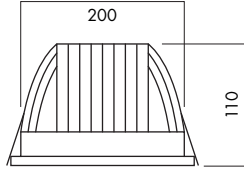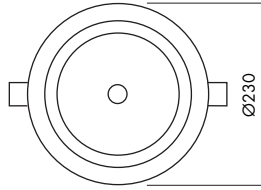

ZEUS1260

